




# NOCRY

**Because keeping you safe is our top priority... You must read through the following care and use instructions before using your new goggles.**

**TIP:** Find the model number of your goggles on the packaging.

**1 The NoCry goggles**

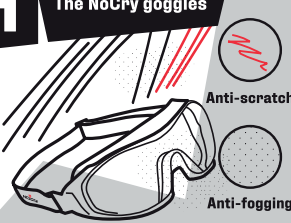


Slip the goggles over your head and adjust the headband until they feel snug and comfortable against your skin.

**2 Cleaning your goggles**




Clean the goggles only using a dry or cold water-moistened soft micro-fiber cloth. Do not use chemicals.

**3 Attention!**




For models 6X3 and 620U first measure that your glasses fit correctly inside, so they won't touch and rub against one another.

**4 Temple adjustment settings (only model 6X1)**

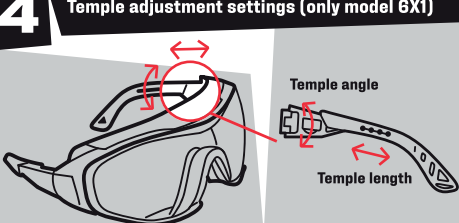

The adjustment settings help the goggles fit your face securely and comfortably. Adjusting the temple angle can also control the airflow.

**5 Replacing temples with the elastic band (only model 6X1)**

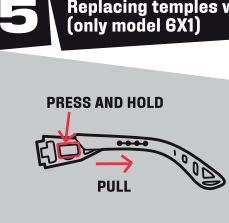


Make sure that the L (left) and R (right) markings on the temple attachment correspond with the left and right side of the goggles.

**6 Storing your goggles**



When not in use, store the goggles in a protective case.

**7 Carefully assess your working environment**



Make sure that the goggles are the most suitable means of protection from potential threats you are likely to be exposed to in your working environment.

**8 Contact us**



Feel free to contact us. We're always here to help.

## HOW DO YOU LIKE YOUR NEW NOCRY SAFETY GOGGLES?

**Help customers just like you make better choices by sharing an honest review of your experience on  or **

Your feedback helps us serve you better and it helps others choose the best products.

To leave us a review on **Amazon** > go to **Orders** > **Write a product review**

To leave us a review on **Trustpilot** > search **NoCry** > **Write a review**